




JP Specialties, Inc. / Earth Shield® Waterstop

**Tech Tips 012**


# How to Install Waterstop in a Concrete Keyway

by David R. Poole, CSI, ACI


25811 Jefferson Avenue  
Murrieta, CA 92562  
T 19517637077  
F 19517637074  
davidp@earthshield.com  
<http://www.jpspecialties.com>

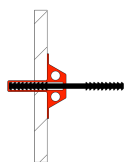


Step 1 — Place waterstop into the waterstop keycup former which is backed by wood Forming.

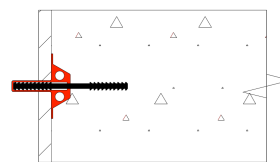

Step 2 — Place first concrete pour.

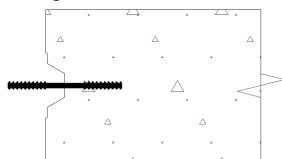

Step 3 — Strip the formwork and the water-stop keycup waterstop former.

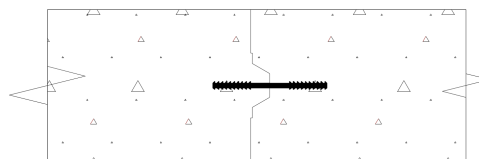

Step 4 — Place second concrete pour.

