




Tech Tips 021

How to Float Concrete at Waterstop Joint

by David R. Poole CSI, ACI

25811 Jefferson Avenue
Murrieta, CA 92562
T 19517637077
F 19517637074
davidp@jpspecialties.com
<https://www.jpspecialties.com>

- 1) Limit concrete placement to the elevation of the waterstop in the first pass, and 2) vibrate concrete under the waterstop. 3) Lift waterstop legs to confirm full consolidation without voids, then 4) place remaining concrete to the top of the slab.

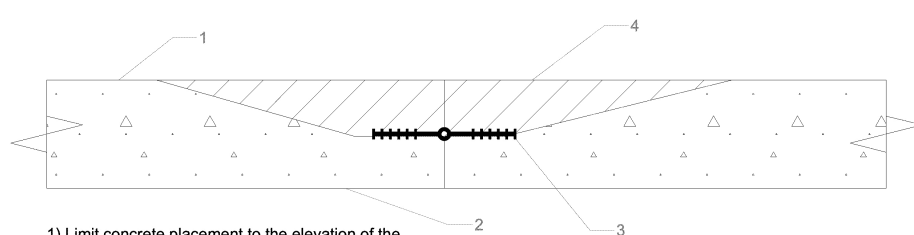

- 1) Limit concrete placement to the elevation of the waterstop in the first pass, and 2) vibrate concrete under the waterstop. 3) Lift waterstop legs to confirm full consolidation without voids, then 4) place remaining concrete to the top of the slab.

JP Specialties, Inc. / Earth Shield® Waterstop 25811 Jefferson Avenue, Murrieta, CA 92562 951-763-7077 • www.jpspecialties.com		
TITLE <i>How to Float Concrete at Waterstop Joint</i>		
PART NUMBER	DRAWN BY <i>DRP</i>	DATE <i>01/21</i>
CAD FILE NAME How to Float Concrete at Waterstop Joint		A